

Rocbolt® Keyless 4-Number Combination Laptop Lock with Coiled Cable

Congratulations!

On your new Rocbolt® Combination Notebook Lock. Rocbolt® locks are the easiest and most reliable way to secure your notebook computer and other devices with the lock option. To help protect against theft, simply set your personalized 4 digit combination code and attach to either a notebook computer or any other device that contains the lock feature.

Registering Your Rocstor Product

To help remember your personalized combination code please register your Lock and code online at www.rocstor.com/locks

Technical Support

Technical support is available to all registered users of Rocstor products. Technical Support contact information can be found on www.rocstor.com

Telephone Support

There is no charge for technical support except long-distance charges where applicable. Please visit www.rocstor.com Monday to Friday 9:00 am to 6:00 pm Pacific Standard Time.

Technical Support

United States
1 818 727 7000

Please note the following when calling support:

- Be prepared to provide the following information:
- Name, address, and telephone number
 - The name of the Rocstor Rocbolt product
 - Symptoms of the problem and how it led to this issue


Limited Two Year Warranty

Rocstor warrants this product against defects in material and workmanship for two years. Rocstor will supply, at its option, comparable new and rebuilt replacements for defective parts and will pay the labor charges to repair the product found to be defective. The dated bill of sale as evidence of the original purchase price along with the defective product is required.




User Manual

4-digit number security combination setup

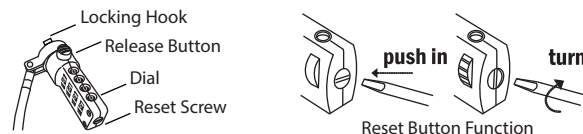

1. The factory preset combination is 0-0-0-0.
2. Turn the Dials to the preset combination of 0-0-0-0
3. Turn the Reset Screw 90° clockwise with a small flathead screw driver, paper clip or a similar tool
4. Choose a desired 4-digit combination number, then turn the Dials and set your desired number
5. Write down your 4-digit combination number and keep it in a safe accessible place for future reference
6. Rotate the reset screw 90 degrees counterclockwise, back to its original vertical position to save the new combination.

Locking

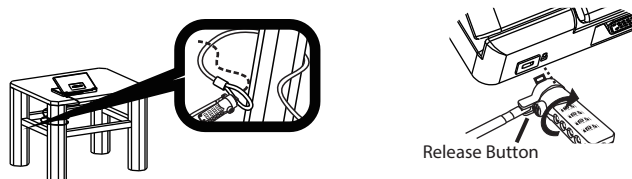

1. Select an object in the room to which you will secure your notebook computer with the Rocbolt Cable Lock. Choose a large, heavy piece of furniture such as table or desk or an irremovable fixture
2. Take the looped end of the cable and wrap it around the selected object
3. Feed the lock through the looped end of the cable as shown
4. Press and hold the Release Button, then insert the Locking Hook into the locking slot of your notebook or your device
5. Release the Button and Turn the dials to conceal your combination.

Additional Spacer Instruction:



If you need additional spacers by the Locking Hook, remove the adhesive strip from the back of the Spacer and attach the spacer to the Rocbolt lock.

Manual Del Usuario

Combinación de seguridad numérica de 4 dígitos



1. La combinación preestablecida de fábrica es 0-0-0-0.
2. Gire los dígitos a la combinación preestablecida de 0-0-0-0
3. Gire el tornillo de Reinicio 90° en dirección a las agujas del reloj con un destornillador pequeño de cabez
4. Elija su combinación numérica de 4 dígitos deseada, luego gire los números y establezca los números deseados
5. Escriba su combinación numérica de 4 dígitos y manténgala en un lugar seguro y accesible para referencias futuras
6. Rote el tornillo de reinicio 90° en contra de la dirección de las agujas del reloj, de vuelta a su posición vertical original para guardar la nueva combinación.

Asegurar



1. Seleccione un objeto en la habitación al cual asegurar su computador notebook con "Rocbolt Cable Lock". Elija una pieza de mobiliario grande y pesada, como una tabla o escritorio o una estructura fija
2. Tome el extremo en forma de lazo del cable y páselo alrededor del objeto seleccionado
3. Pase el candado a través del extremo en forma de lazo como se muestra
4. Presione y mantenga presionado el botón Liberar, luego inserte el gancho asegurador en el espacio de bloqueo de su notebook o aparato
5. Suelte el botón y gire los dígitos para ocultar su combinación.

Utilisation des espaceurs:



Retirez l'endos de papier et ajoutez un ou plusieurs espaceurs, cote preencolle sur le crochet de verrouillage, pour ajuster.