


**2U Horizontal Finger Duct Rack Cable Management Panel
with Cover for 19" Network Rack - Metal - Black**

User Manual

Y10E044-B1

Feature Identification

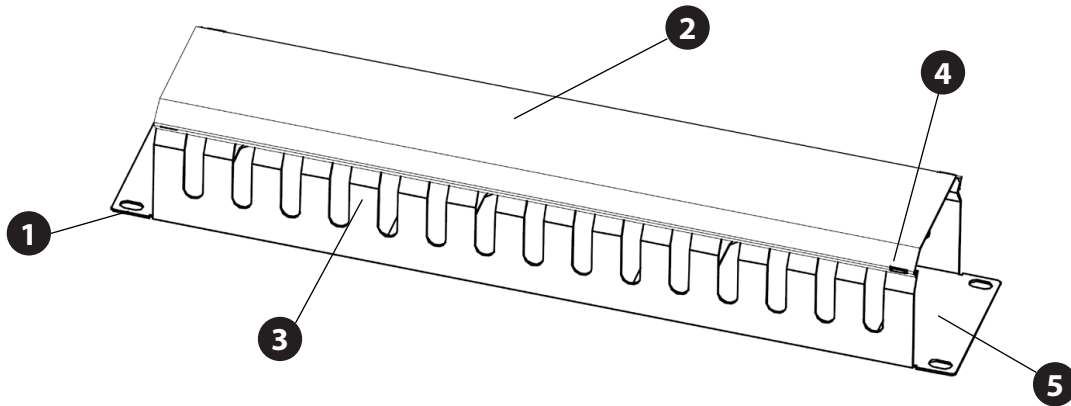

1 - Mounting Ears

- Mounting Ears Securely Duct Cable Management Panel to the rack

2 - Duct Cover

- Removable Duct Cable Management Panel keeps cables out of the way during installation or upgrades

3 - Cable Management Fingers

- Duct Cable Management Panel allows cables to be inserted and held in place and is available along the length on both sides.

4 - Duct Cover Latches

- The Duct Cable Management Panel has a latching mechanism on each corner that keeps the Duct Cover in its position.

5 - Cable Path


- Duct Cable Management Panel allows the inserted cables to run off to the side.

Package included items

- Cable Management Panel (Y10E044-B1) x 1
- M6 Screws x 4
- M6 Cage Nuts x 4
- Plastic Washers x 4

Measurements

Dimension Unit : Millimeter (mm)

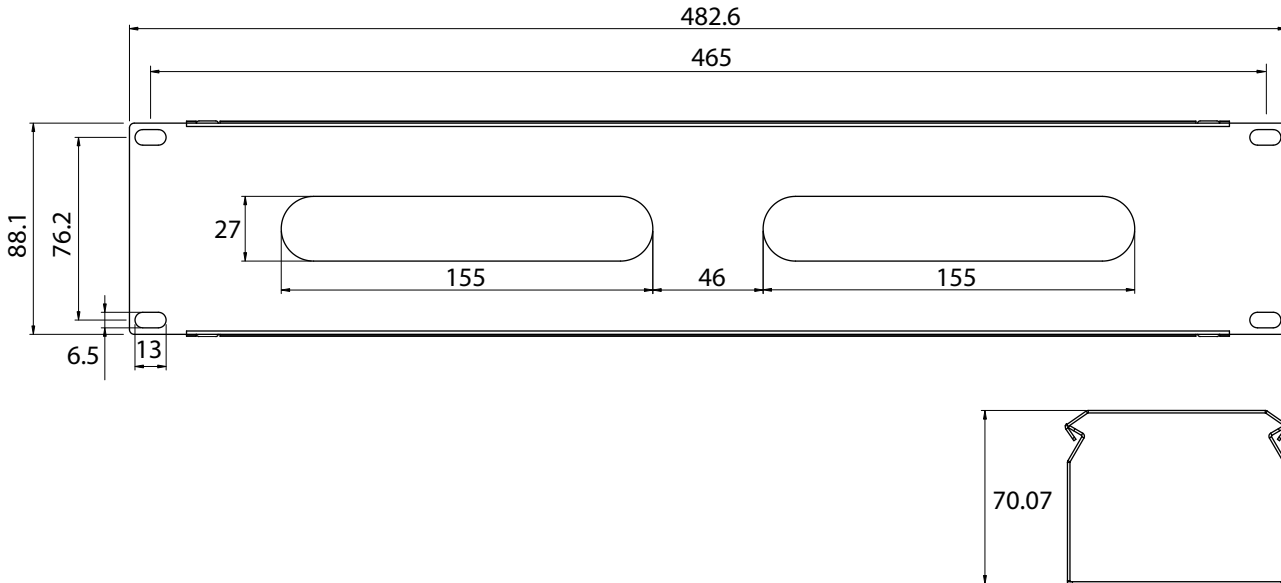

Installation

Installation

1. Decide where to install the Duct Cable Management Panel by determining the U Height Number or mounting location on the rack posts.
2. Install four Cage Nuts onto the Cage Nut Holes at the designated U Height Number. Utilize a Cage Nut Tool or your preferred method of installation, if available, to securely fasten them in place.
3. Align the Mount Ears with the Cage Nuts which were previously inserted on the rack posts.
4. Place the Plastic Washers (four in total) onto the Screws (also four in total). Utilize a Phillips Head Screwdriver to install the Screws and securely fasten the Duct Cable Management Panel to the Mounting Posts of the rack.

Procedure

1. Thread the cables through the Cable Management Fingers and the rear Passthrough Holes, arranging them as desired for organization.
2. Attach and firmly secure the Duct Cover in place by utilizing the four Duct Cover Latches.

Five-Year Factory Warranty

Rocstor provides a Limited Factory Warranty which applies to products you have purchased for commercial or industrial use in the ordinary course of your business.

Terms of warranty

Rocstor warrants its SolidRack product series to be free from defects in materials and workmanship for a period of five years from the date of purchase. Rocstor's obligation under this warranty coverage is limited to repairing or replacing, at its sole discretion, any such defective products. This warranty does not apply to equipment that has been damaged by accident, negligence, or misapplication or has been altered or modified in any way. In the event Rocstor repairs or provide a replacement of a defective product or part, the warranty does not extend the original warranty period. Rocstor reserves the right to repair or replace any parts under warranty as new or factory re manufactured.

Non-transferable warranty

This warranty extends only to the original purchaser who must have properly registered the product. The product may be registered at the Rocstor Web site, [https://rocstor.com/customer-support/warranty registration](https://rocstor.com/customer-support/warranty-registration).

Exclusions

If Rocstor tests or examines the alleged defect in the product and finds that the damages or defects do not exist or were caused by a third party or an end user's misuse, improper installation or testing, or negligence, then Rocstor shall not be liable under the warranty. Furthermore, unauthorized attempts to repair or modify the product by wrong or inadequate electrical connection or voltage, inadequate or inappropriate site operation conditions, repair, installation corrosive area or atmosphere, a change in location or operating conditions or use, repair by non-Rocstor designated personnel, exposure to the elements, fire, Acts of God, theft, or equipment installation not recommended or contrary to Rocstor's specifications or recommendations. Warranties will be void and Rocstor will not be liable if the product serial number is tampered with, altered, removed, defaced or any other cause beyond the range of intended use.

Contact Information

Corporate Headquarters

12979 Arroyo Ave
San Fernando, CA 91340 - USA

Office: +1 (818) 727-7000
Fax: +1 (818) 875-0002
Email: info@Rocstor.com

Technical Support / RMA

Hours: 9:00 am - 5:00 pm PST
Mon - Fri (excluding holidays)

Tell: +1 (818) 727-7000 (Domestic and Internationals)
Fax: +1 (818) 875-0002
Email: support@Rocstor.com

Sales Info

Hours: 8:00 am - 5:00 pm PST
Mon - Fri (excluding holidays)

Tell: +1 (818) 727-7000 (Domestic and Internationals)
Fax: +1 (818) 875-0002
Email: support@Rocstor.com

Corporate, Government and Academic Customers

Our Corporate Sales Team's goal is to help our U.S.A. and Canadian customers find a storage solution that best serves their needs. We will help you determine your best purchasing options. For more information please contact the appropriate department below or call us at +1 (818) 727-7000.

General sales information:	sales@Rocstor.com
Corporate sales information:	corporate_sales@Rocstor.com
Educational sales information:	academic_sales@Rocstor.com
Federal, State & Local government sales information:	government_sales@Rocstor.com

Resellers/Business Development/OEM Partners

All Channel National and International Resellers, VARs, Consultants ...

contact Rocstor Channel Sales:	call: +1 (818) 727-7000
	Email: reseller_info@Rocstor.com